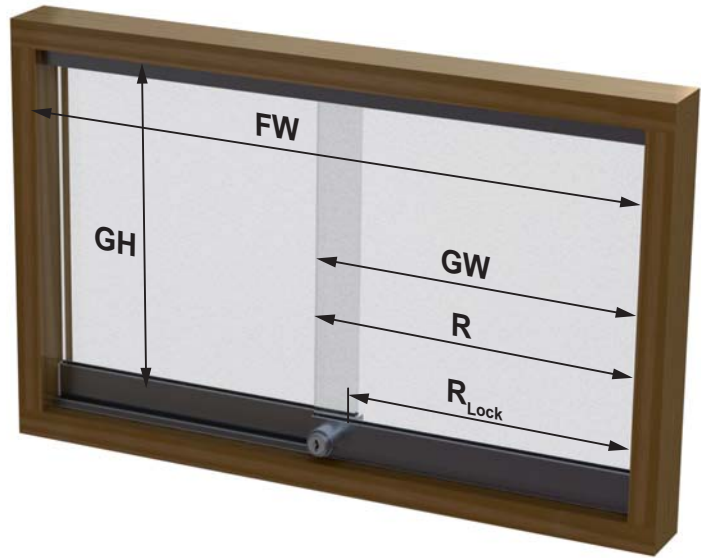


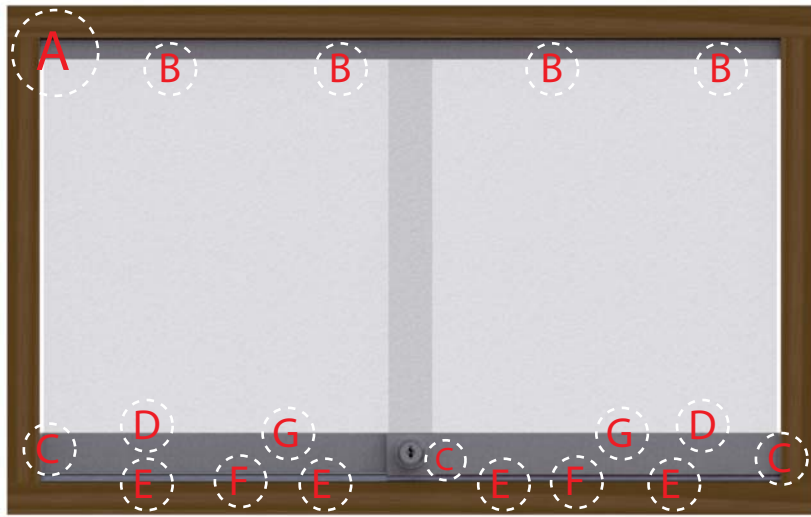
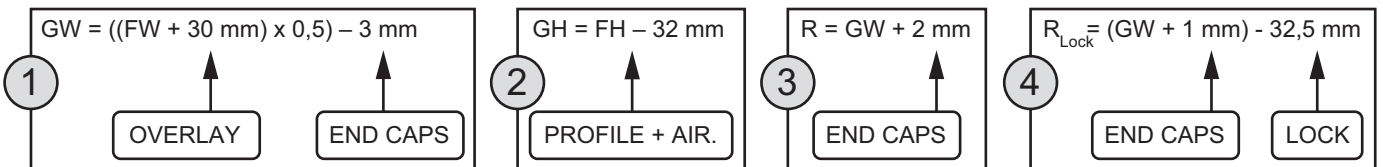
# MOUNTING INSTRUCTION F/LOCK #2010








## SYSTEM #2010

- FW = Frame width (inside measurement)
- GW = Glass width
- FH = Frame height (inside measurement)
- GH = Glass height
- R = Rail length
- R<sub>Lock</sub> = Rail length for lock



### How to prepare glass door size?



- |   |   |   |  |
|---|---|---|--|
| <p><b>A</b></p> <p>TOP E-Track #22.26.010</p>  | <p><b>B</b></p> <p>SILENCER #22.26.070<br/>inside TOP E-Track</p>  | <p><b>C</b></p> <p>END CAP ZAMAK #22.26.051</p>  | <p><b>D</b></p> <p>U-SPLINE PLASTIC #22.26.060</p>  |
| <p><b>E</b></p> <p>TROLLEY #22.26.041</p>      | <p><b>F</b></p> <p>BOTTOM TRACK #22.26.030</p>                     | <p><b>G</b></p> <p>GLASS H-RAIL #22.26.021</p>  |  |